

## Processing and installing instructions for pre-compressed sealing tapes in the solid and window construction sector

### Preparation

To install the tape, please have a measuring tape, knife or scissors, spatula and, if necessary, wedges at hand. Please remove release agents from the joint edges. The joint edges need to run parallel. Measure the width of the joints and choose the appropriate strip width in accordance with the determined joint tolerances and any potential joint movements (if necessary, use different tape sizes, check the respective chart or price-list).


### Installation process

Preparation of the tape: when cutting the tape, an allowance of no less than 1 to 2 cm per meter needs to be considered. Cut off the over-pressed beginning and end of the tape.


Remove the cover of the self-adhesive film by pulling it off evenly to avoid tearing. Stick the precompressed tape into the joint. With vertical joints, start at the lower end and work your way up. Press the self-adhesive side of the tape (use a spatula if necessary) firmly against the joint edge. Make sure that the tape is not elongated in this process.

The precisely cut individual tape lengths can be extended by pushing, i.e. bumping them one against the other. Butt joints and faulty patches can be closed with an appropriate sealing compound, e.g. fenband Kleber/glue. The tape should be installed at a minimum of 2 mm inwards, away from the joint front edge. Our predetermined joint widths of the individual tape sizes should not be exceeded, so as to guarantee the desired sealing effect of the installed tape.


The expansion of the tape depends on the temperature of the joints and the environment. The tape should not be stored at temperatures > 20 °C for a longer period of time. At lower temperatures, we recommend storage of the material at a room temperature of 20 °C for at least 24 hours before installment.

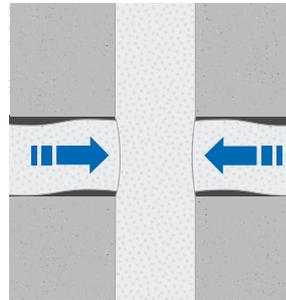

For cross- and T-joints we recommend to butt-join the horizontal tapes against the vertical. Please make sure to compress the tapes against each other.

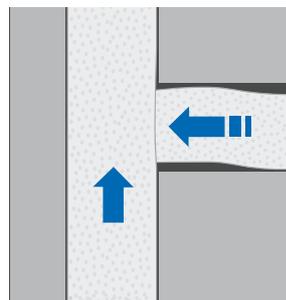

While cutting the tape for the window installation, a minimum surplus of 1 cm per meter joint-length should also be considered.

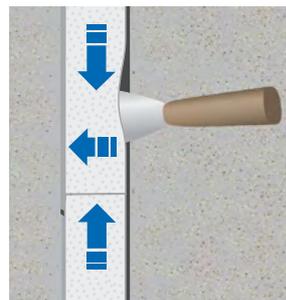

With vertical joints, start at the bottom and work your way up. Press the self-adhesive side of the tape (if necessary using a spatula) tightly against the joint edge. The ends of individual tapes must be butt-joined against each other without stretching the tape in the process.

### Please note

The functional efficiency of the tape can only be achieved if it is installed or applied according to our respective processing rules and was, or is, not exposed to any unforeseeable influences. Disintegration due to external influences does not fall under the warranty. All assurances relate to the application of the product under Middle European weather conditions. Please find additional important product information and processing instructions in the results and processing guidelines. Our terms of sale and delivery apply (GTC).

## >> | Contact details

- we gladly provide individual advice – please don't hesitate to call our service hotline

pinta abdichtung gmbh  
 Kreuzbreite 4  
 31675 Bückeberg, Germany  
 phone +49 (0) 57 22. 89 36 - 0  
 fax +49 (0) 57 22. 89 36 - 16  
 sales@pinta-abdichtung.com  
 www.pinta-abdichtung.com